

# Premium

**CITRUS JUICER 34 oz**  
**EXPRIMIDOR DE CITRICOS 1 L**



This product is for domestic use only

Use & Care Manual  
Important Safeguards

MODEL: PCJ639  
MODELO: PCJ639

Dear Customer:

Thank you for buying our product. This juice extractor is excellent in design and is made with high quality materials and components. We hope this product will provide you good service and convenience.

## Parts

a. Cup

b. Axes


c. Base

d. Top cover

e. Extractor cover

f. Extractor

g. Filter

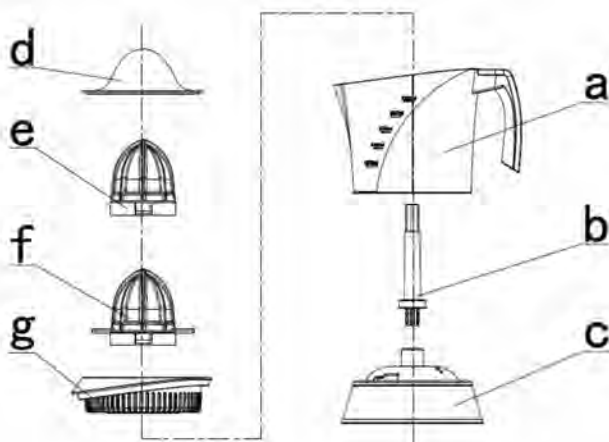

## Important Instructions

**When using electrical appliances, in order to reduce the risk of fire, electric shock, or injury to persons, basic safety precautions should be followed, including the following:**

**Please pay attention to these points:**

- ◆ Read all instructions carefully, even if you are familiar with the appliance.
- ◆ The electric power supply should come from a properly wired outlet.

Also, check the capacity of the electric supply and use the appliance separately from other equipment. Always ensure the voltage to be used corresponds to the voltage stated on the unit.

- ◆ Place all electric products on a dry and stable surface. Use a dry cloth when cleaning the equipment body.
- ◆ This appliance is suitable for soft citric fruits, as oranges. It will not work with hard fruits.
- ◆ Shut off the electric power when any the following happens:
  - a. The turning blades are not working properly.
  - b. There is an uncommon noise when in use.
  - c. While cleaning.
  - d. When you finish using the appliance
- ◆ Keep it away from children to avoid accidents.
- ◆ Do not exceed this appliance rate capacity.
- ◆ After each use, unplug from the outlet.(When unplugging, always grasp and pull the plug and not the cable)
- ◆ This appliance is designed only for household use.

**Important! The device does not have to run for more than one minute. If a lot of juice is needed, let the juicer run for 15 seconds, followed by a pause of another 15 seconds. The total running time should not exceed 5 minutes.**

## **How to use**

- ◆ Remove the power cable from the base. Turn the appliance ON, and remove the lid. The machine is on hold.
- ◆ Cut the previously washed fruit in half and put a half on top of the turning blade; press the fruit against the extractor with your hands to make the turning blade turn. Repeat.
- ◆ Once the cup is full, take the handle with one hand and hold the appliance with the other. Turn the cup to the right 30 degrees and pull it up to separate the cup from the base. Replace and continue working according to the above steps.
- ◆ Once the filter is full, remove the cup, remove the filter from the cup completely and discard all the fruit residues. Continue working, cleaning the filter regularly.

- ◆ The filter can be adjusted according to how much juice pulp you desire: five shifts is more pulp and the first shifts are less. The first shift usually extracts pure fruit juice.
- ◆ This appliance has two extracting heads. If you are extracting from a big fruit, you can use the large one.
- ◆ Do not put the whole or parts of the body into water.
- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid electrical hazards.

## Clean and care

- ◆ When cleaning, please unplug the cord first, rotate the cup, remove it and separate the filter, pull the axes and clean each piece one by one. Dry carefully.
- ◆ Replace the cup and all parts, cover and store after cleaning.

## Correct disposal of this product



This mark indicates that this product should not be disposed with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## Parameters


Voltage	:	120 V~
Power	:	25 W
Frequency	:	60 Hz
Capacity	:	1.0L

Estimado cliente:

Gracias por comprar nuestro producto. Este extractor de jugo posee un excelente diseño y está fabricado con componentes y materiales de alta calidad. Esperamos que este producto le proporcione comodidad y buen servicio.

## Partes

- a. Taza                                      b. Ejes                                      c. Base                                      d. Cubierta superior  
e. Cubierta del extractor              f. Extractor                                      g. Filtro

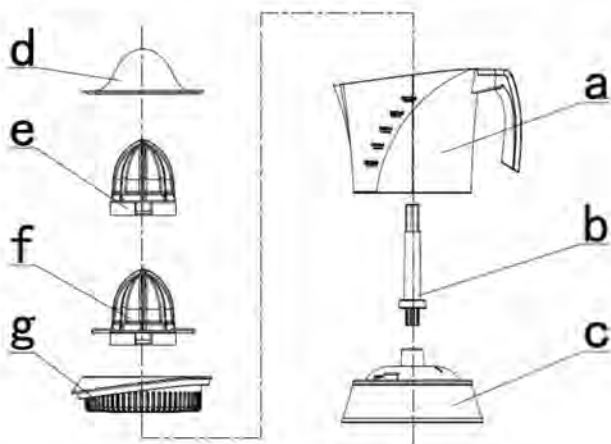

## Instrucciones Importantes

**Cuando se utilicen aparatos eléctricos se deben seguir las siguientes instrucciones básicas de seguridad con el fin de reducir los riesgos de fuego, descarga eléctrica o daños a personas:**

**Ponga atención a estos aspectos:**

- ◆ Lea cuidadosamente todas las instrucciones aunque ya conozca el producto.
- ◆ La fuente de energía eléctrica debe provenir de un enchufe debidamente cableado.

Adicionalmente, la capacidad de la energía eléctrica del suministro debe ser igual a la que utilice el equipo y este debe usarse separadamente de otros equipos. Asegúrese de que el voltaje usado sea igual al que indica el equipo.

- ◆ Coloque todos los productos eléctricos sobre una superficie seca y estable. Utilice un paño seco para limpiar el cuerpo del equipo.
- ◆ Este aparato es apto para frutas cítricas blandas, como naranjas. No funcionará con frutos duros.
- ◆ Apague la alimentación eléctrica cuando ocurra lo siguiente:
  - a. las cuchillas giratorias no funcionan correctamente.
  - b. se produce un ruido raro cuando esté en uso.
  - c. durante la limpieza.
  - d. cuando termine de utilizar el aparato
- ◆ Manténgalo alejado de los niños para evitar accidentes.
- ◆ No exceda esta capacidad del aparato. Después de cada uso, desenchúfelo del tomacorriente. (Al desenchufar, siempre sujete y tire del enchufe, no del cable)
- ◆ Este aparato está diseñado solamente para uso doméstico.

**¡Importante! El aparato no tiene que funcionar por más de un minuto. Si necesita una gran cantidad de zumo, haga funcionar el aparato por 15 segundos, seguidos por una pausa de 15 segundos. El tiempo de funcionamiento total no tiene que superar los 5 minutos.**

## **Modo de uso**

- ◆ Retire el cable de alimentación de la base. Encienda el aparato y quite la tapa. La máquina está en espera.
- ◆ Corte la fruta previamente lavada por la mitad y coloque una mitad encima de la hoja giratoria; Presione la fruta contra el extractor con las manos para hacer que gire la cuchilla. Repita la operación.
- ◆ Una vez que la taza esté llena, tome el mango con una mano y sujete el quipo con la otra. Gire la taza hacia la derecha 30 grados y hale hasta separar la taza de la base. Vuelva a colocar y continúe trabajando según los pasos anteriores.
- ◆ Una vez que el filtro esté lleno, retire la taza, remueva completamente el filtro de la taza y deseche todos los residuos de frutas. Continúe trabajando, y limpie el filtro con regularidad.

- ◆ El filtro puede ajustarse según cuánta pulpa de jugo desee: cinco turnos es más pulpa y los primeros turnos son menos pulpa. El primer turno normalmente extrae jugo de fruta puro.
- ◆ Este aparato tiene dos cabezas de extracción. Si se está usando una fruta grande, puede utilizar el extractor grande.
- ◆ No coloque la totalidad o partes de la base del equipo en agua.
- ◆ Si el cable de alimentación está dañado, debe ser reemplazado por el fabricante o su agente de servicio o una persona calificada con el fin de evitar peligros eléctricos.

## Limpieza y Cuidado

- ◆ Cuando limpie, por favor desconecte primero el cable, gire la taza, separe el filtro, tire de los ejes y limpie cada pieza una por una. Seque cuidadosamente.
- ◆ Coloque la taza y todas las piezas, cubra y guarde después de la limpieza.

## Correcta eliminación de este producto



Esta marca indica que este producto no debe eliminarse con otros residuos domésticos. Para evitar posibles daños al medio ambiente o la salud humana por la eliminación incontrolada de residuos, recíclolo correctamente para promover la reutilización sostenible de recursos materiales. Para devolver el dispositivo usado, por favor utilice los sistemas de recogida disponibles en su área o póngase en contacto con la tienda donde compró el producto. Ellos pueden llevarse este producto para reciclaje ambiental seguro.

## Parámetros

Voltaje	:	120 V~
Poder	:	25 W
Frecuencia	:	60 Hz
Capacidad	:	1.0L

The logo for 'Premium' is located in the bottom right corner. It features the word 'Premium' in a serif font, enclosed within a dark oval shape. A thin, curved line arches over the top of the oval, starting from the right side and ending on the left side, creating a sense of motion or a swoosh.

Premium

Manual de uso y cuidado  
Precauciones importantes

Este producto es para uso doméstico únicamente.